

Vehicle Administration

The Vehicles feature displays information regarding your company's vehicles.

- [VIN](#)
- [Manual VIN](#)
- [Terminal](#)
- [License Plate](#)
- [License Plate Jurisdiction](#)

You do not need to manually enter any data into the Vehicles feature; vehicles equipped with an activated and registered in-cab device will be displayed here automatically.

You can select to view vehicle information in a report format. Select to view report by **Vehicle**, **Vehicle Group**, or **All**.

VIN

VIN reported from the vehicle's JBus or the user manually supplied VIN (will be flagged as Manual VIN).

Manual VIN

Indicates the VIN was manually supplied by user (NOT from vehicle's JBus).

Terminal

The terminal the vehicle is assigned to.

License Plate

User entered License Plate number.

License Plate Jurisdiction

User entered state the vehicle works out of.