

# Terminal Groups

Terminal Groups provide the Drivers Terminal for HOS, [Authority Configuration](#), and Vehicle association for [Hierarchical Reporting Groups](#)

- [Configuration using the Web Portal](#)
- [Synchronizing Changes with Devices](#)
- [Options](#)
  - [Name](#)
  - [Address](#)
  - [City](#)
  - [State](#)
  - [Zip](#)
  - [Phone](#)
  - [Time Zone](#)
  - [Apply Daylight Savings](#)
  - [Terminal Disabled](#)
  - [Device Registration Code](#)
  - [Company](#)
  - [Authorities](#)

## Configuration using the Web Portal

Please read the [Multiple Operating Authority](#) document which describes the features and how to configure for achieving your desired outcome

## Synchronizing Changes with Devices

Changes will be automatically synchronized with ELDs upon the next communication received from the ELD

## Options

### **Name**

Name of this Terminal.

### **Address**

Terminal Street Address. This is displayed on the driver's HOS log.

### **City**

Terminal City

### **State**

Terminal State

### **Zip**

Terminal Postal Code

### **Phone**

Terminal Phone Number

### **Time Zone**

Terminal Time Zone. This determines the display time on the Truck-PC for any driver assigned to this Terminal.

### **Apply Daylight Savings**

Applies daylight savings to the timezone when displaying time.

### **Terminal Disabled**

Disables Terminal. Users associated with the terminal will not be able to log in.

### **Device Registration Code**

Code to automatically assign a vehicle to a terminal.

### **Company**

The Company Group which this terminal is assigned also determines this Terminals place within a [Hierarchical Reporting Group](#)

### **Authorities**

The [Operational Authorities](#) which any Driver logging onto an ELD of a Vehicle assigned to this Terminal allowed to operate under.