

# Company Groups

Company settings are used to split a Fleet among separate operating authorities (DOT Number). If your an owner operator you can modify the current record to reflect who your currently operating for. The company name, DOT Number, and address specified here are recorded on each hos log.

- [Special Considerations](#)
- [Configuration using the Web Portal](#)
  - [Adding New Group:](#)
  - [Copying Settings from an existing group settings:](#)
- [Synchronizing Changes with the Devices](#)
- [Options](#)
  - [Name](#)
  - [DOT Number](#)
  - [Address](#)
  - [City](#)
  - [State](#)
  - [Zip](#)
  - [Time Zone](#)
  - [Apply Daylight Savings](#)
  - [Email 1 thru 25](#)
  - [Network 1 thru 10](#)
  - [Restrict Wifi Networks](#)
  - [Company Is Disabled](#)
  - [Ethernet Disabled](#)
  - [Empty Call Question\(s\) Enabled](#)
  - [DT Mobile Enabled](#)

## Special Considerations

As of Jan 2015 a new feature was introduced which allows a Driver to select from Multiple Operating Authorities during Logon of the Device. We recommend you review this capability and that of Hierarchical Reporting Groups instead of using the Company Group for the application of a USDOT:

- [Multiple Operating Authority](#)
- [Reporting Groups](#)

## Configuration using the Web Portal

### Adding New Group:

1. Click "Add Group"
2. Type in the name of the group in the "Name" field
3. Choose the proper settings you would like to use for this group.
4. Click "Save"

### Copying Settings from an existing group settings:

1. Select the group settings name from which you would like to copy the settings by clicking the corresponding name.
2. Click "Copy."
3. Make any edits to the group as desired.
4. Click "Save."

## Synchronizing Changes with the Devices

Editing and saving the group will push the changes to the device.

## Options

### Name

Company Name

### DOT Number

Company DOT Number. This is displayed on HOS logs for drivers using a vehicle assigned to this company.

### Address

Company Street Address. This is displayed on HOS logs for drivers using a vehicle assigned to this company.

### City

Company City

### State

Company State

# Company Groups

## Zip

Company Zip Code

## Time Zone

Company time-zone. Rollup information is sent from the Truck-PC at midnight of the time-zone specified.

Timezone is used to specify the 24hr period which End Of Day Rollup spans. If multiple companies are set with different timezones it will be more difficult to reconcile Driver/Vehicle Performance data.

## Apply Daylight Savings

Applies daylight savings to this company.

## Email 1 thru 25

Alias and Email address for 1st thru 25th contact

## Network 1 thru 10

Wi-Fi SSID and Key for 1st thru 10th network

## Restrict Wifi Networks

Restricts connection to Wifi Networks only to those listed here in Company Settings.

## Company Is Disabled

Disables company. Will prevent any Managers assigned to the company from logging into the website.

## Ethernet Disabled

Disables Ethernet.

## Empty Call Question(s) Enabled

Enables Empty Call Question(s) on Pre-Trip (for Slingshot).

## DT Mobile Enabled

Enables DT Mobile.