Events and Positions

The Events and Positions report displays the driver and vehicle location updates and events recorded from the in-cab unit, including Over Idling, Over RPM, Ignition on /off, Vehicle start/stop, Driver Logon/Logoff, ELD Startup/Shutdown, Speeding Events (both for exceeding the fleet-configured threshold, as well as the speed limit posted at the location of the event) and more.

