

# Which is the current software version?

## Question:

Which is the current software version?

## Answer:

- For Truck PC units: DTCore version 6.09.08
- For the TND 765: DTCore 6.08.00
- For all other models: DTCore 6.08.00

## Related articles

- [My touchscreen is not responding. How can I fix it?](#)
- [How-to Calibrate Your Screen](#)
- [Device Auto Logging Driver Off](#)
- [How-to Change a GPS Location From N/A](#)
- [Which is the current software version?](#)

[Back to The Top](#)

[Home](#)