

FleetWatcher, How-to Find the Vehicle/Driver Info Page

How-to Find the Vehicle/Driver Info Page

Step-by-step guide


1. Login to FleetWatcher.




2. Click on "Reports"




3. Click on "Vehicle/Driver Info"

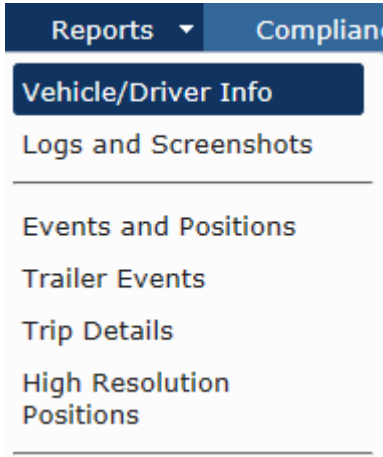


4. Click "Vehicle" to search by vehicle number, or "Driver" to search by Driver name or code.

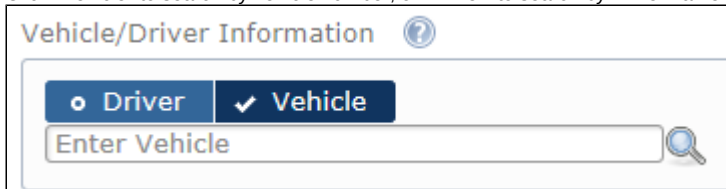

5. Type the vehicle number in the box located underneath the vehicle button and then click on the vehicle number.

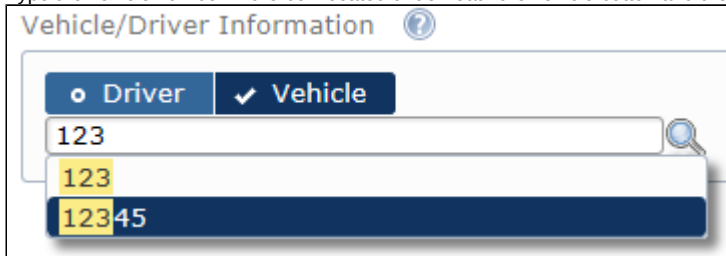

 6. Click "Get Results" – Located on the right side of the page.



FleetWatcher, How-to Find the Vehicle/Driver Info Page

7. You are now on the Vehicle/Driver Info page.

The screenshot shows the FleetWatcher interface. At the top, there's a navigation bar with tabs: Management, Reports, Compliance, Mail, and Mapping. Below this is a header area with a search bar and a 'Get Results' button. The main content area is divided into two columns. The left column is titled 'Vehicle' and contains details for vehicle 12345, including VIN, Location, Last GPS Time, Last Mfg Time, Power Status, Logged On, Ignition, Last Status, Version, Transport, Serial Number, Terminal, Groups, and Tagged For. The right column is titled 'Driver' and contains details for the driver, including Name, Email, Logged On, Active, Last Logon, Last File Sync Update, Settings Group, Terminal, Time Zone, and Uses Daylight Savings. The interface also includes a sidebar with various action buttons like 'Ping Vehicle', 'Send Message', 'Request HOS Logs', 'Request EODR', 'Log Off Driver', 'Reboot Unit', 'Req ELD Logs', 'Req Registration', 'Req HR Inventory', 'Req DR Inventory', 'Upload HOS Logs', and 'Screen Capture'.

Vehicle	Driver
Name: 12345	Name: N/A
Truck/PCID: 320	UserID: N/A
VIN: N/A	Email: N/A
Odometer: N/A (as of 6/24)	Logged On: N/A
Location: 2010 S Milestone Dr, Salt Lake City, UT 84103, United States	Active: N/A
Last GPS Time: 7/7/2014 3:35:21 PM	Last Logon: N/A
Last Mfg Time: 7/18/2014 10:31:47 AM	Last File Sync Update: N/A
Power Status: ON	Settings Group: N/A
Logged On: No (Last Driver:)	Terminal: N/A
Ignition: N/A	Time Zone: N/A
Location: N/A	Uses Daylight Savings: N/A
Date: N/A	
Last Status: N/A	
Version: 5.21.02	
Device Type: TND 760	
Transport: WH1	
Serial Number: 191408	
Terminal: N/A	
Groups: Default (Settings)	
Default (Equipment)	
Default (Patch)	
Tagged For...: Settings	
Queued Patch (0): None	

Related articles

- [How-to Add a Company and Terminal](#)
- [FleetWatcher, How-to Enter a Route in New DTNav](#)
- [Which Web Browsers for FleetWatcher Does DriverTech Support?](#)
- [What do the icons in the Log Overview report mean?](#)
- [FleetWatcher, How does it determine which speed reading will be reported?](#)

[Back to The Top](#)

[Home](#)