

How-to change the truck number on your device


Question:

How do I change the truck number on my device?

Answer:

Step-by-step guide

1. Log into [FleetWatcher](#)
2. Pull up the current truck number in FleetWatcher on the Vehicle/Driver Information page under Reports
3. Press "ReReg ELD" to initiate the registration process

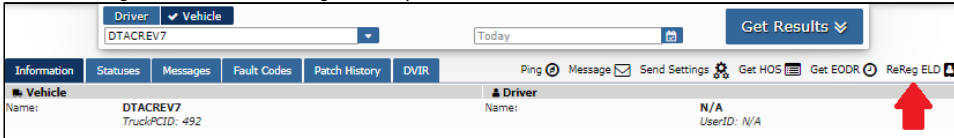


The screenshot shows the FleetWatcher interface. At the top, there's a header with 'Driver' and 'Vehicle' tabs, a dropdown menu showing 'DTACREV7', and a 'Today' date selector. A 'Get Results' button is on the right. Below this is a navigation bar with tabs: 'Information', 'Statuses', 'Messages', 'Fault Codes', 'Patch History', and 'DVIR'. The 'Information' tab is selected. Under 'Information', there are two sections: 'Vehicle' and 'Driver'. The 'Vehicle' section shows 'Name: DTACREV7' and 'TruckPCID: 492'. The 'Driver' section shows 'Name: N/A' and 'UserID: N/A'. A red arrow points to the 'ReReg ELD' button in the top right corner of the 'Driver' section.

4.



The screenshot shows the FleetWatcher interface with the 'Truck#' field highlighted. The field contains a white box with a green arrow button to its right. Below the field is a keyboard with letters, numbers, and symbols. The 'Truck#' label is on the left, and the white box is in the center. The green arrow button is on the right. The keyboard is at the bottom of the screen.

5. Enter your truck number into the field (using the keyboard) and then touch the arrow:

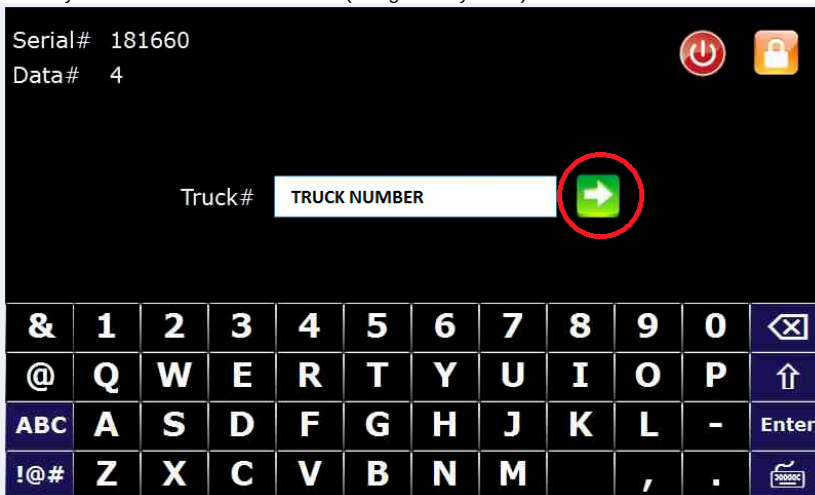

The screenshot shows the FleetWatcher interface with the 'Truck#' field highlighted. The field contains the text 'TRUCK NUMBER'. The green arrow button to the right of the field is circled in red. Below the field is a keyboard with letters, numbers, and symbols. The 'Truck#' label is on the left, and the white box is in the center. The green arrow button is on the right. The keyboard is at the bottom of the screen.

How-to change the truck number on your device

6. Touch the arrow again on the "Optional Registration" screen (leave the field blank unless otherwise instructed by your management)

truckpc (10.10.10.133, 10.11.0.8) - service mode

Serial# 181621
Data# 467
Truck# DTACREV7

Optional registration# 

& 1 2 3 4 5 6 7 8 9 0 
@ Q W E R T Y U I O P 
ABC A S D F G H J K L - Enter
!@# Z X C V B N M , . 

7. The device will now communicate the new registration to the server. This may take several minutes.
8. When the registration is complete you will be brought to the login page:

Logon

& 1 2 3 4 5 6 7 8 9 0 
@ Q W E R T Y U I O P ?
A S D F G H J K L - *
\$ Z X C V B N M _ , . !

Menu   13:09 

Related articles

- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [How-to change the truck number on your device](#)
- [My touchscreen is not responding. How can I fix it?](#)
- [How-to turn a smartphone into your ELD display screen](#)
- [Device Auto Logging Driver Off](#)

[Back to The Top](#)

[Home](#)