

How-to change the truck number on your device


Question:

How do I change the truck number on my device?

Answer:

Step-by-step guide

1. Log into [FleetWatcher](#)
2. Pull up the current truck number in FleetWatcher on the Vehicle/Driver Information page under Reports
3. Press "ReReg ELD" to initiate the registration process

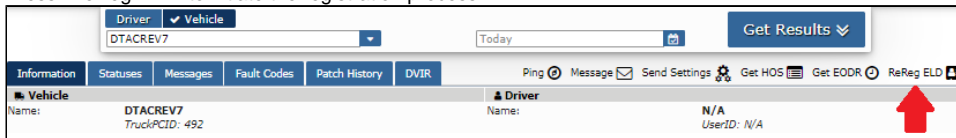


The screenshot shows the FleetWatcher web interface. At the top, there's a navigation bar with tabs for 'Driver', 'Vehicle', and 'Today'. Below this, there's a section for 'Vehicle' information, including 'Name: DTACREV7' and 'TruckPCID: 492'. To the right, there's a 'Driver' section with 'Name: N/A' and 'UserID: N/A'. A red arrow points to the 'ReReg ELD' button in the top right corner of the interface.

4.



The screenshot shows the FleetWatcher mobile app interface. At the top, there's a 'Serial#' field with the value '181660' and a 'Data#' field with the value '4'. Below these, there's a 'Truck#' field with a text input box and a green arrow button. A keyboard is displayed at the bottom of the screen, with the 'Truck#' field selected.

5. Enter your truck number into the field (using the keyboard) and then touch the arrow:

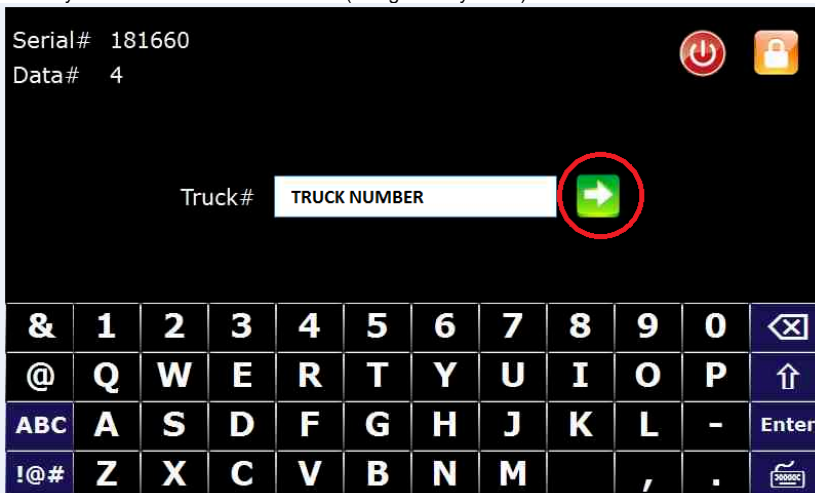


The screenshot shows the FleetWatcher mobile app interface. At the top, there's a 'Serial#' field with the value '181660' and a 'Data#' field with the value '4'. Below these, there's a 'Truck#' field with the text 'TRUCK NUMBER' entered. A green arrow button is circled in red, indicating it should be touched. A keyboard is displayed at the bottom of the screen, with the 'Truck#' field selected.




How-to change the truck number on your device

6. Touch the arrow again on the "Optional Registration" screen (leave the field blank unless otherwise instructed by your management)

truckpc (10.10.10.133, 10.11.0.8) - service mode


Serial# 181621
Data# 467
Truck# DTACREV7




Optional registration# 

& 1 2 3 4 5 6 7 8 9 0 
@ Q W E R T Y U I O P 
ABC A S D F G H J K L - Enter
!@# Z X C V B N M , . 

7. The device will now communicate the new registration to the server. This may take several minutes.
8. When the registration is complete you will be brought to the login page:

Logon

& 1 2 3 4 5 6 7 8 9 0 
@ Q W E R T Y U I O P ?
A S D F G H J K L - *
\$ Z X C V B N M _ , . !

Menu   13:09 

Related articles

- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [How-to change the truck number on your device](#)
- [My touchscreen is not responding. How can I fix it?](#)
- [How-to turn a smartphone into your ELD display screen](#)
- [Device Auto Logging Driver Off](#)

[Back to The Top](#)

[Home](#)