

What is Logging Malfunction (4) ?

Question:

What is Logging Malfunction (4)?

Answer:

Logging Malfunction (4) is a system controller reset. This will typically occur when the unit detects GPS movement but the unit is not receiving ROAD SPEED data from the JBUS. The system controller is reset in an attempt to correct this issue.

- [How-to Add a Company and Terminal](#)
- [FleetWatcher, How-to Enter a Route in New DTNav](#)
- [Which Web Browsers for FleetWatcher Does DriverTech Support?](#)
- [What do the icons in the Log Overview report mean?](#)
- [FleetWatcher, How does it determine which speed reading will be reported?](#)

[Back to The Top](#)

[Home](#)