



How-to Enable Turn by Turn Directions in DTNAV

Step-by-step guide

After your destination information has been entered and your route has been calculated:
From the menu, touch DTNav

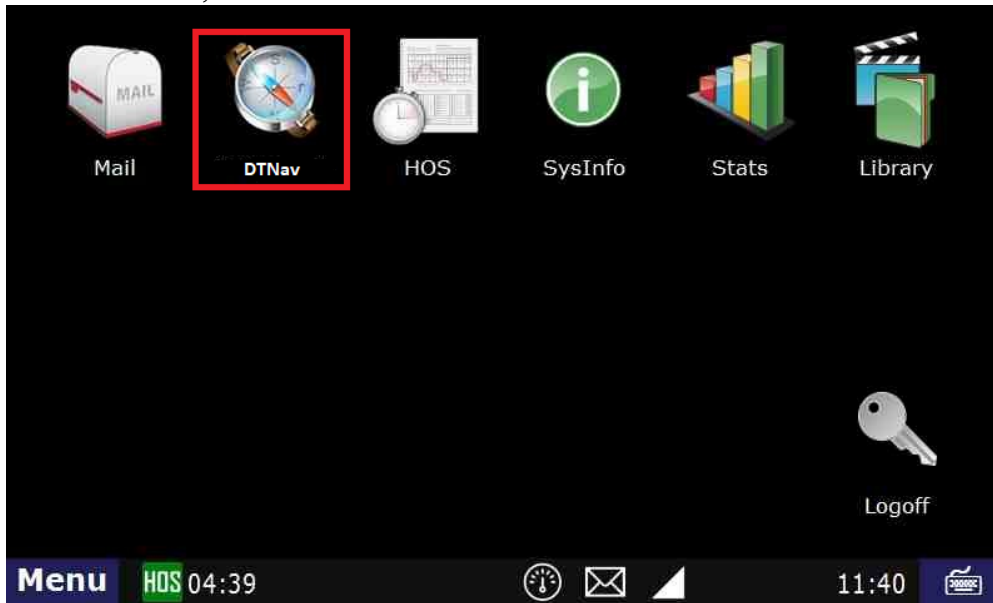

1. From the map screen press on the button in the bottom right

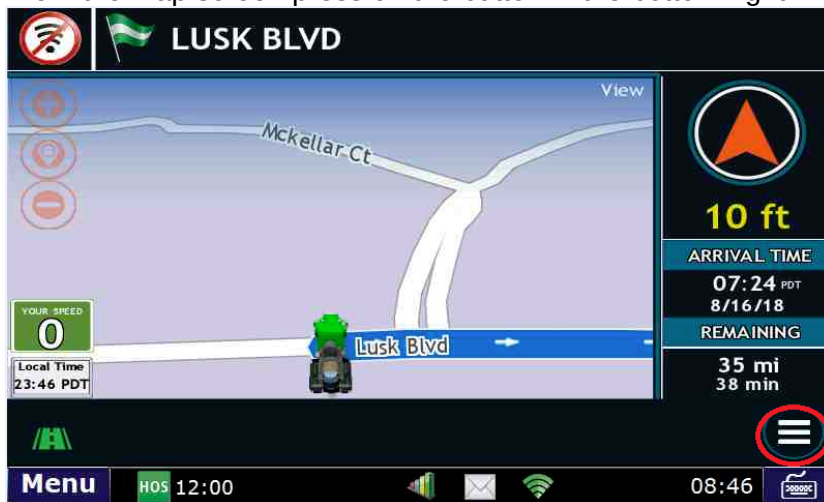


How-to Enable Turn by Turn Directions in DTNAV


2. Now press on "View"



3. Now press "Turn by Turn"

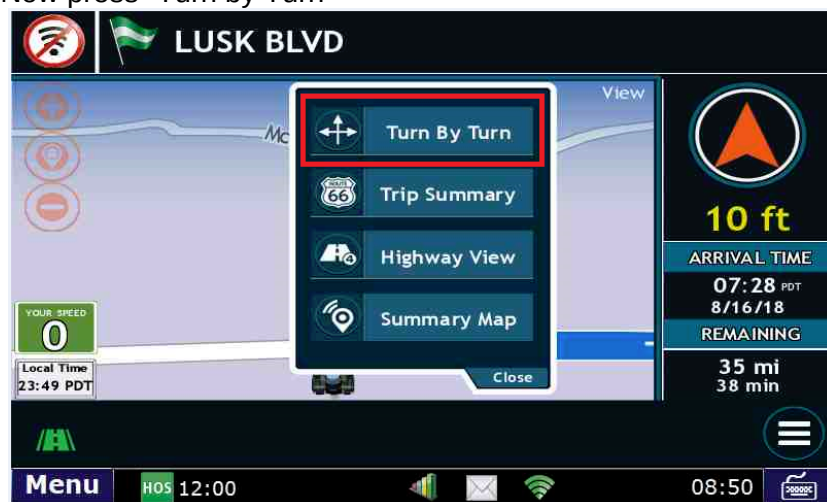

4. You should now see turn by turn instructions

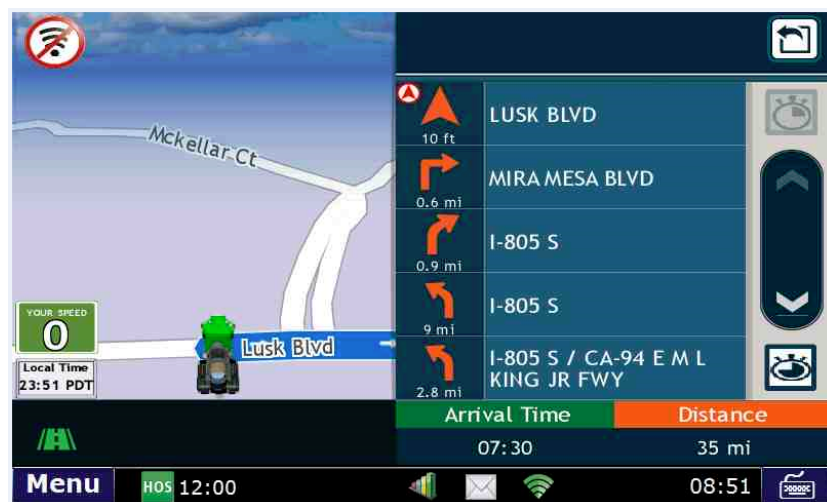

Related articles

- [FleetWatcher, How-to Enter a Route in New DTNav](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)
- [How-to change the truck number on your device](#)
- [DTNav, typing in a name that starts with "South"](#)

How-to Enable Turn by Turn Directions in DTNAV

- [My touchscreen is not responding. How can I fix it?](#)

[Back to The Top](#)

[Home](#)