

# Why am I being auto-removed from Yard Move?

**Question:**

My DT unit removed me from Yard Move on its own. Why did this happen?

**Answer:**

This depends on the settings for Yard Move that your company has set.

1. Example; the company has selected to allow Yard Move
2. Yard Move max mph has been set to 20
3. You are allowed to set your status to Driving - Yard Move
4. If you exceed 20 mph, the unit will detect this and set you to the regular Driving status.