

FleetWatcher, How does it determine which speed reading will be reported?

Question:

How does FleetWatcher determine which speed reading will be reported?

Answer:

The TruckPC determines which speed recording is reported on FleetWatcher. The TruckPC can record speed either through the ECM (via JBUS) or from the GPS. The TruckPC will always choose the ECM reading as long as the ECM reading is available. The TruckPC will only use the GPS speed data for recording if the ECM data becomes unavailable.

Drivertech's Technical Support Line: 866-331-8785

Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [How-to Add a Company and Terminal](#)
- [FleetWatcher, How-to Enter a Route in New DTNav](#)
- [Why do I see events from other trucks on my log for today?](#)

[Back to The Top](#)

[Home](#)