

How does Unassigned Driving Work?

Question:

How does unassigned driving work?

Answer:

- Unassigned Driving happens when driving occurs on the vehicle without anyone being logged in.
- The Unassigned driving segment will be sent into FleetWatcher once the Driving segment has been completed.
- Once the driving segment reaches FleetWatcher, it is put in the Unassigned Driving Report.
- Once in the report, the Unassigned Driving segment on the unit will send information once a driver has answered the question (which appears as a pop-up window on the unit).
- The answer to the question will determine what happens to the Driving Segment that is already in FleetWatcher.
- If the driver answers "Yes" to the question FleetWatcher will then place that segment into the driver's logs under the drive-line.
- If the driver answers "No" to the question the unit will continue to ask the question to any other drivers who log-in to the unit.
- If the driver cancels the question then the driver will continue to be asked the question for the canceled segment every time to the driver enters HOS.

Drivertech's Technical Support Line: 866-331-8785

Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)