

# How-to Use the Co-Driver Feature

## How-to article template

### Step-by-step guide

1. The co-driver (the person who is not actually driving) logs in to the unit
2. The co-driver enters an **Off-Duty** or **Sleeper Berth** status
3. The co-driver logs out
4. The driver (the person who will be driving) logs in
5. The driver enters an "**On-duty**" status, and ensures to add the co-driver as the co-driver on the status

### Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)