

When do my logs/current totals update?

Q: When do my logs/current totals update?

A:

The Current Totals update:

1. With position reports.
2. When the carrier requests it from FleetWatcher.
3. When the carrier “pings” the truck.
4. When the driver changes from an on duty status to an off duty status or vice versa.
 - An “on duty status” is On Duty or Driving.
 - An “off duty status” is Off Duty or Sleeper Berth.
 - An update is not sent when going from an on duty status to an on duty status.
 - An update is not sent when going from an off duty status to an off duty status.

The Logs update:

1. When the driver logs out. **[These revisions may be overwritten]**
2. When the driver goes into violation. **[These revisions do NOT get overwritten]**
3. When the Carrier requests it from FleetWatcher. **[These revisions may be overwritten]**
4. When the driver selects "Send Logs"
5. When the driver certifies it. **[These revisions do NOT get overwritten]**
6. ** After 6 hours of activity. **[These revisions may be overwritten]**
 - If none of the other triggers 1-5 have taken place.

Drivertech's Technical Support Line: 866-331-8785

Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)