

Why am I being auto-removed from Yard Move?

Q: My DT unit removed me from Yard Move on its own. Why did this happen?

A: This depends on the System Settings for Yard Move that your company has set.

1. Example; the company has selected to allow Yard Move
2. Yard Move max mph has been set to 20
3. You are allowed to set your status to Driving - Yard Move
4. If you exceed 20 mph, the unit will detect this and set you to the regular Driving status.

DriverTech's Technical Support Line: 866-331-8785

Brief explanation: how the driver is removed from Yard Move automatically	Related articles													
• Why did my workflow go to my Inbox and not my Work tab? • Why can't I add a status when I stop driving? • Why am I being auto-removed from Yard Move? • Who can Certify an HOS log? • What triggers an event that is recorded by the camera?														