



# How-to Disable Speed Alerts in DTNav

## Step-by-step guide

1. From the main menu, enter DTNav.

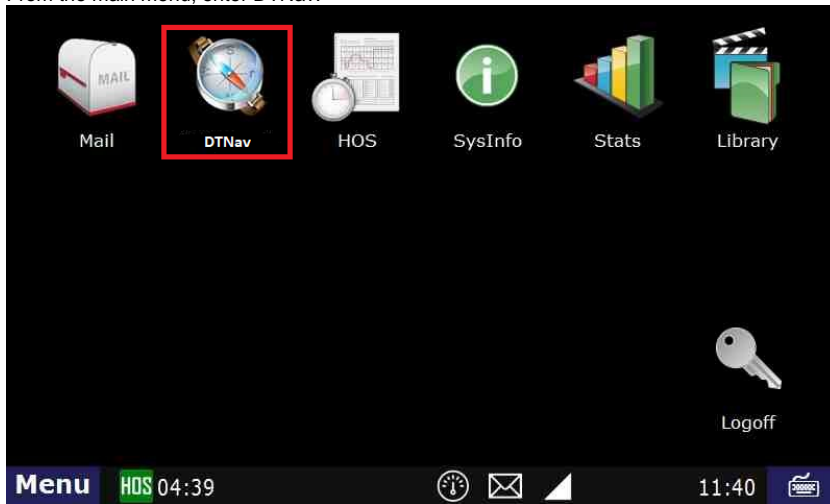

2. The main DTNav screen has a button for Settings:

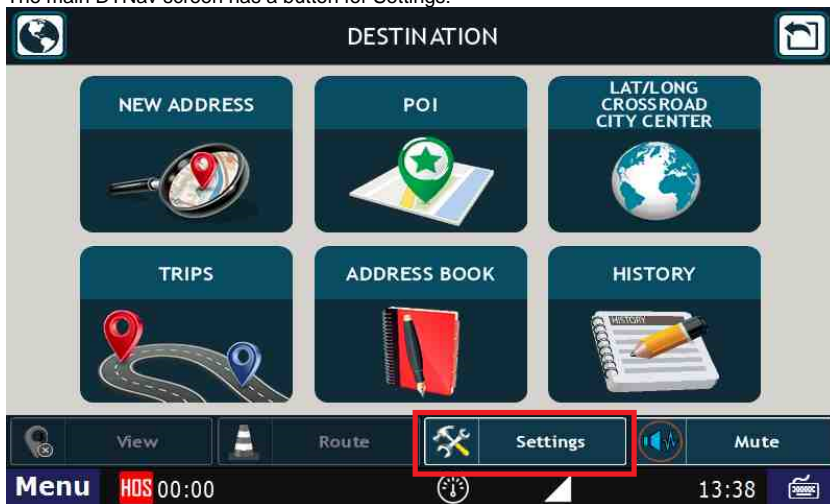


3. After pressing on the Settings button, you'll want to press on Truck Settings:



4. Then Truck Warnings:

# How-to Disable Speed Alerts in DTNav

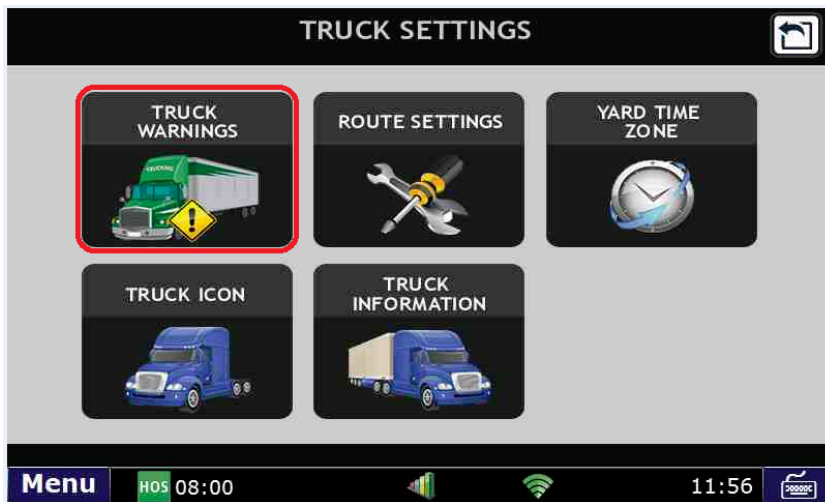

5. Then Speed Limit Warning:



6. You can then select the speed, relative to the posted speed limit, that the warning will trigger. Placing the slider all the way to the left will disable the warning

# How-to Disable Speed Alerts in DTNav



7. Touch the "Done" button when you're done



## Related articles

- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)
- [How-to change the truck number on your device](#)
- [Helpful Pages for New Customers](#)
- [How-to Calibrate Your Screen](#)

[Back to The Top](#)

[Home](#)