

White Display

Problem:

The display is only showing a white screen

Solution:

1. Disconnect power from display (or entire unit if TND)
2. Plug power back in and try turning on unit
3. If the issue has not been resolved, please call technical support: 866-331-8785

Related articles

- [Training Videos](#)
- [My touchscreen is not responding. How can I fix it?](#)
- [How-to Calibrate Your Screen](#)
- [Device Auto Logging Driver Off](#)
- [Which is the current software version?](#)

[Back to The Top](#)

[Home](#)