

How-to annotate adverse driving conditions

1. From the HOS US-8 screen, press "Driving".

The screenshot shows the HOS US-8 interface. At the top, there are tabs for 'US-8', 'Logs', and 'Options'. Below the tabs, it says 'Adam Wright is 'Off-duty''. A green message box states 'If your log is correct, you can drive for 08:00'. To the right of this message are buttons for 'Today's log', 'More timers', 'Co-driver logs', and 'Driving mode 'Normal''. Below the message box is a table with four rows of driving time and reset information:

70hr	70:00:00	10hr reset	00:00:00
11hr	11:00:00	Split reset	N/A
14hr	14:00:00	34hr reset	00:00:00
8hr	08:00:00	30min reset	00:00:00

At the bottom of the screen, there are four buttons: 'Off-duty', 'Sleeper', 'Driving' (highlighted with a red box), and 'On-duty'. The bottom status bar shows 'Menu', 'HOS 08:00', a clock icon, a signal strength indicator, the time '09:14', and a battery icon.

2. You will want to say "No" to "Enter Manual Mileage".
3. Next, select the appropriate remark. In this case, we will select "Adverse Conditions":

The screenshot shows the 'Select Remark' screen. At the top, there are navigation buttons: '<< Back', 'Select Remark', '<<', '1/1', and '>>'. Below these are five buttons: 'None', 'In Traffic', 'Accident', 'Adverse Conditions' (highlighted with a red box), and 'Other'. The bottom status bar is identical to the previous screenshot, showing 'Menu', 'HOS 08:00', a clock icon, a signal strength indicator, the time '09:17', and a battery icon.

4. Select "Submit"

The screenshot shows the 'Submit' screen. At the top, there are navigation buttons: '<< Back' and 'Submit' (highlighted with a red box). Below these are four rows of information: 'Time' (09:15) with a 'More...' button, 'Status' (Driving (manual)) with a 'Miles: 0.0' button, 'Location' (Salt Lake City, UT), and 'Remark' (Adverse Conditions). The bottom status bar is identical to the previous screenshots, showing 'Menu', 'HOS 08:00', a clock icon, a signal strength indicator, the time '09:18', and a battery icon.

How-to annotate adverse driving conditions


5. This is how it will look on the driver's screen:

The screenshot shows a driver's interface for US-8. At the top, there are tabs for 'Logs' and 'Options'. Below them, it says 'Adam Wright is 'Driving (manual) - Adverse Conditions''. A green message box states: 'If your log is correct, you can drive for 07:56.' To the right of this message are buttons for 'Today's log', 'More timers', 'Co-driver logs', and 'Driving mode 'Normal''. Below the message box is a table with four rows of HOS data:

70hr	69:55:59	10hr reset	10:00:00
11hr	10:55:59	Split reset	N/A
14hr	13:55:59	34hr reset	34:00:00
8hr	07:55:59	30min reset	00:30:00

Below the table are four buttons: 'Off-duty', 'Sleeper', 'Driving', and 'On-duty'. At the bottom of the screen, there is a 'Menu' button, a 'HOS 07:56' indicator, a clock icon, a signal strength icon, the time '09:20', and a battery icon.

6. This is how it will look in FleetWatcher:

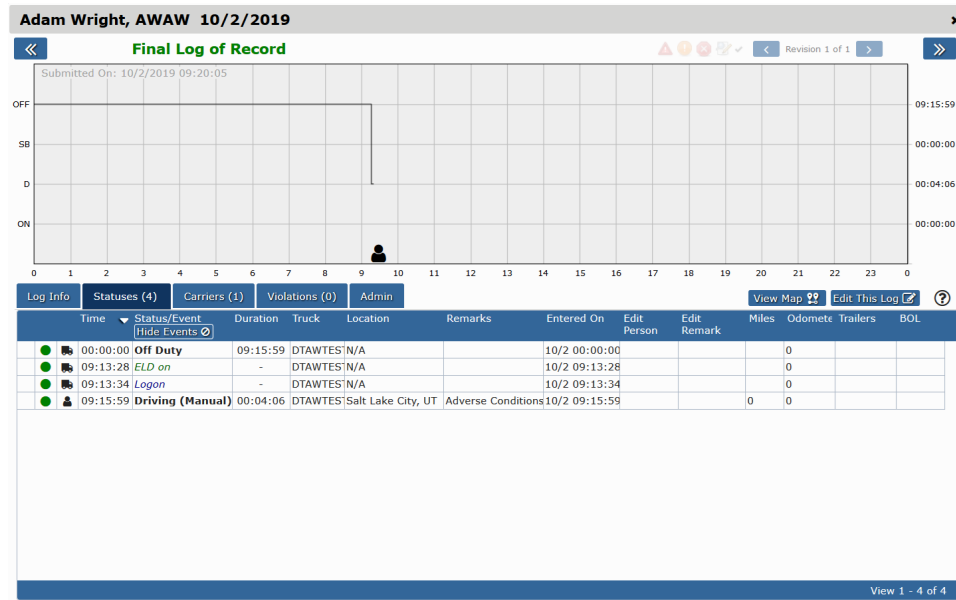

How to enter annotations into HOS logs

Related articles

- [Why did my workflow go to my Inbox and not my Work tab?](#)
- [Why can't I add a status when I stop driving?](#)
- [Why am I being auto-removed from Yard Move?](#)
- [Who can Certify an HOS log?](#)
- [What triggers an event that is recorded by the camera?](#)