

Terminal Groups

Terminal Groups provide the Drivers Terminal for HOS, [Authority Configuration](#), and Vehicle association for [Hierarchical Reporting Groups](#)

- [Configuration using the Web Portal](#)
- [Synchronizing Changes with Devices](#)
- [Options](#)
 - [Name](#)
 - [Address](#)
 - [City](#)
 - [State](#)
 - [Zip](#)
 - [Phone](#)
 - [Time Zone](#)
 - [Apply Daylight Savings](#)
 - [Terminal Disabled](#)
 - [Device Registration Code](#)
 - [Company](#)
 - [Authorities](#)

Configuration using the Web Portal

Please read the [Multiple Operating Authority](#) document which describes the features and how to configure for achieving your desired outcome

Synchronizing Changes with Devices

Changes will be automatically synchronized with ELDs upon the next communication received from the ELD

Options

Name

Name of this Terminal.

Address

Terminal Street Address. This is displayed on the driver's HOS log.

City

Terminal City

State

Terminal State

Zip

Terminal Postal Code

Phone

Terminal Phone Number

Time Zone

Terminal Time Zone. This determines the display time on the Truck-PC for any driver assigned to this Terminal.

Apply Daylight Savings

Applies daylight savings to the timezone when displaying time.

Terminal Disabled

Disables Terminal. Users associated with the terminal will not be able to log in.

Device Registration Code

Code to automatically assign a vehicle to a terminal.

Company

The Company Group which this terminal is assigned also determines this Terminal's place within a [Hierarchical Reporting Group](#)

Authorities

The [Operational Authorities](#) which any Driver logging onto an ELD of a Vehicle assigned to this Terminal allowed to operate under.