

Vehicle Inconsistency

The Vehicle Inconsistency report displays instances where the in-cab unit loses power or where unit experiences sensor jumps (i.e. gap in connectivity). The Vehicle Inconsistency report can be run for a selected vehicle or vehicle group.

- [Loss of Power Tab](#)
- [Sensor Jump Tab](#)

Loss of Power Tab

Select the Loss of Power tab to view instances where the in-cab unit loses power.

Once the Loss of Power report has been generated, you can select the [+] icon next to a particular vehicle to show additional metrics included in the report (including time, location, type (of loss of power event)).

[blocked URL](#)

Sensor Jump Tab

Select the Sensor Jump tab to view instances where the in-cab unit experiences sensor jumps (such as a gap GPS or cellular communication).

Once the Sensor Jump report has been generated, you can select the [+] icon next to a particular vehicle to show additional metrics included in the report (including time, location, sensor, from amount, to amount, jump amount).

[blocked URL](#)