


How-to View Your BOL

How-to View Your BOL

Step-by-step guide

1. From the main Menu, touch the HOS option

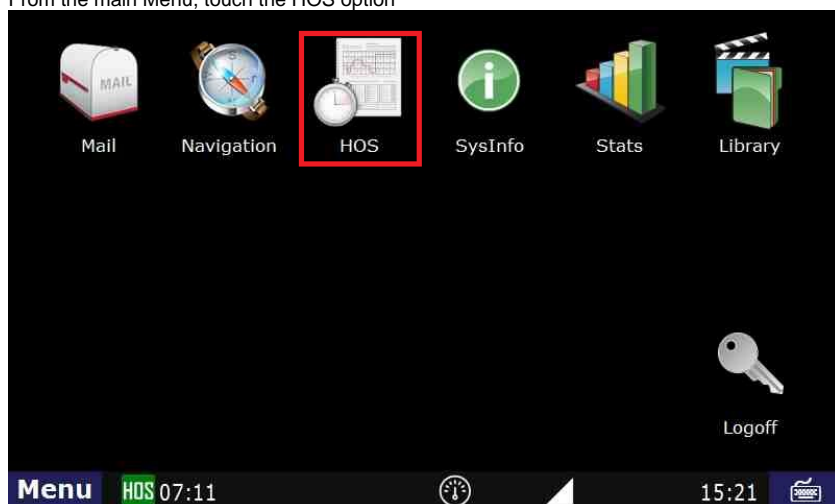

2. Touch the "Logs" tab.

A screenshot of the 'Logs' tab interface. At the top, there are three tabs: 'Short-haul 100', 'Logs' (highlighted with a red rectangle), and 'Options'. Below the tabs are three buttons: 'Prev', 'Next', and 'View'. The main content is a table with the following columns: 'Date', 'Miles', 'Off-duty', 'S.B.', 'Driving', and 'On-duty'. The table contains data for dates from 09/20 to 09/27. The row for 09/27 is highlighted in blue. The status bar at the bottom shows 'Menu', 'HOS 11:00', a clock icon, an envelope icon, a signal strength indicator, the time '13:33', and a battery icon.

Date	Miles	Off-duty	S.B.	Driving	On-duty
09/27	0.0	13:20:33	00:00:00	00:00:00	00:13:19
09/26	0.0	20:12:38	00:06:26	00:02:08	03:38:48
✓ 09/25	0.0	24:00:00	00:00:00	00:00:00	00:00:00
✓ 09/24	0.0	24:00:00	00:00:00	00:00:00	00:00:00
✓ 09/23	0.0	24:00:00	00:00:00	00:00:00	00:00:00
✓ 09/22	0.0	24:00:00	00:00:00	00:00:00	00:00:00
✓ 09/21	0.0	24:00:00	00:00:00	00:00:00	00:00:00
✓ 09/20	0.0	24:00:00	00:00:00	00:00:00	00:00:00

3. Touch the day that you would like to view.

A screenshot of the 'Logs' tab interface, identical to the previous one, but with the row for the date '09/27' highlighted with a red rectangle. The status bar at the bottom shows 'Menu', 'HOS 11:00', a clock icon, an envelope icon, a signal strength indicator, the time '13:33', and a battery icon.

Date	Miles	Off-duty	S.B.	Driving	On-duty
09/27	0.0	13:20:33	00:00:00	00:00:00	00:13:19
09/26	0.0	20:12:38	00:06:26	00:02:08	03:38:48
✓ 09/25	0.0	24:00:00	00:00:00	00:00:00	00:00:00
✓ 09/24	0.0	24:00:00	00:00:00	00:00:00	00:00:00
✓ 09/23	0.0	24:00:00	00:00:00	00:00:00	00:00:00
✓ 09/22	0.0	24:00:00	00:00:00	00:00:00	00:00:00
✓ 09/21	0.0	24:00:00	00:00:00	00:00:00	00:00:00
✓ 09/20	0.0	24:00:00	00:00:00	00:00:00	00:00:00

How-to View Your BOL

4. Touch the Summary tab, (Notice your co-driver info is here) then Next

The screenshot shows the 'Brad Support' app interface. At the top, there are navigation buttons: '<< Back', 'Brad Support', '<< 09/30', and '>>'. Below this is a tab bar with 'Summary', 'Graph', 'List', 'Short-haul 100', 'Violations', and 'Unassigned'. The 'Summary' tab is selected and highlighted with a red box. Below the tabs are 'Prev' and 'Next' buttons, with 'Next' highlighted by a red box. The main content area displays driver information in a list format:

Display Date:	11:06 09/30
24-hr Start Time:	00:00
Time Zone Offset:	UTC-06:00
Carrier's USDOT number:	1238850
Carrier Name:	DriverTech
Driver Name:	Brad Support
Driver ID:	BRAD
Driver License State:	OT
Driver License Number:	1234567890
Co-Driver Name:	
Co-Driver ID:	
Device Type:	ELD

At the bottom, there is a status bar with 'Menu', 'HOS 09:36', a signal strength icon, a battery icon, '11:07', and a truck icon.

5. The BOL, as well as your trailer information is displayed on this page.

The screenshot shows the 'Brad Support' app interface, similar to the previous one. The 'Summary' tab is selected. Below the tabs are 'Prev' and 'Next' buttons. The main content area displays trailer and BOL information in a list format:

ELD Registration ID:	0026
ELD Provider:	DriverTech
Tractor ID:	BRAD
Tractor VIN:	
Current Tractor Odometer:	0.0 miles
Current Engine Hours:	0.0 hrs
Current Location:	
Bills of Lading (BOL):	1234TEST
Trailer(s):	4321
HOS Rule:	Short-haul 100
Exempt Driver Status:	Yes
Unidentified Driving:	No

At the bottom, there is a status bar with 'Menu', 'HOS 09:33', a signal strength icon, a battery icon, '11:09', and a truck icon.

Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)