

# When do my logs/current totals update?

## Question:

When do my logs/current totals update?

## Answer:

The Current Totals update:

1. With position reports.
2. When the carrier requests it from FleetWatcher.
3. When the carrier “pings” the truck.
4. \*\* When the driver changes from an on duty status to an off duty status or vice versa.
  - An “on duty status” is On Duty or Driving.
  - An “off duty status” is Off Duty or Sleeper Berth.
  - An update is not sent when going from an on duty status to an on duty status.
  - An update is not sent when going from an off duty status to an off duty status.

The Logs update:

1. When the driver logs out. **[These revisions may be overwritten]**
2. When the driver goes into violation. **[These revisions do NOT get overwritten]**
3. When the Carrier requests it from FleetWatcher. **[These revisions may be overwritten]**
4. When the driver selects “Send Logs”
5. When the driver certifies it. **[These revisions do NOT get overwritten]**
6. \*\* After 6 hours of activity. **[These revisions may be overwritten]**
  - If none of the other triggers 1-5 have taken place.

## Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)