

# How can I change my Co-Pilot resolution back to normal?

## Question:

How can I change my Co-Pilot resolution back to normal?

## Answer:

**\*Any standard Windows keyboard is required to make this change**

You can resolve it by plugging in a keyboard.

1. Hit the **F3** key on the keyboard.
2. Holding the **ALT** key, hit **F4**, release the **ALT** key
3. Reopen **Copilot**

## Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)