

What new information is on the Drive-Safe screen with 6.01.04+?

Question:

What New information is on the Drive-Safe screen with 6.01.04+?

DTCore version 6.01.04+ has a new Drive-Safe screen enabled to show more timers so the driver is able to more accurately manage their time even with a Co-Driver involved

Answer:

The new Drive-Safe screen shows these timers:

Driving: How much time the driver has to drive until their next violation

70hr: How much available time the driver has for his 70 hour Total On-Duty timer


11hr: How much available time the driver has for his 11 hour driving timer

14hr: How much available time the driver has for his 14 hour On-Duty timer

8hr: How much available time the driver has for his 8 hour Mandatory Break timer

Hrs back: How much time the driver will "get back" after the logs are recalculated at midnight

Co-Driver: Allows the ability to see a Co-Driver's timers if there is a Co-Driver assigned to the driver's logs for the current day

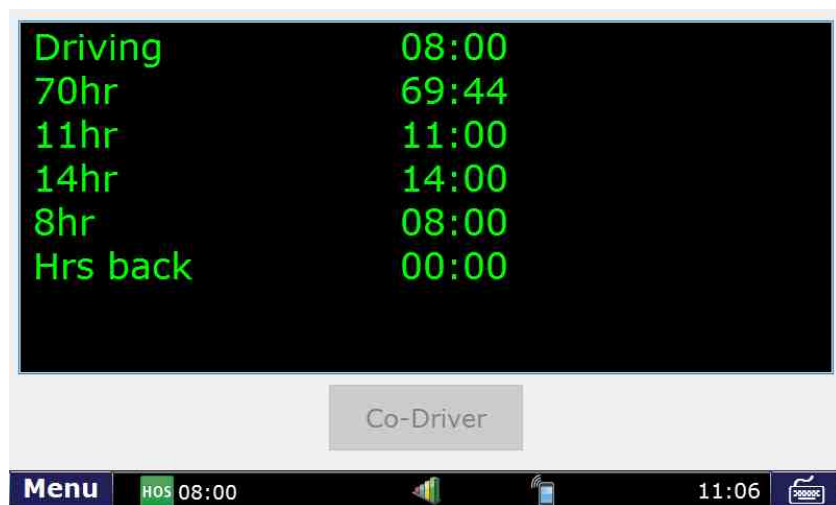

Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)