


How-to Disable Speed Alerts in DTNav

Step-by-step guide

1. From the main menu, enter DTNav.

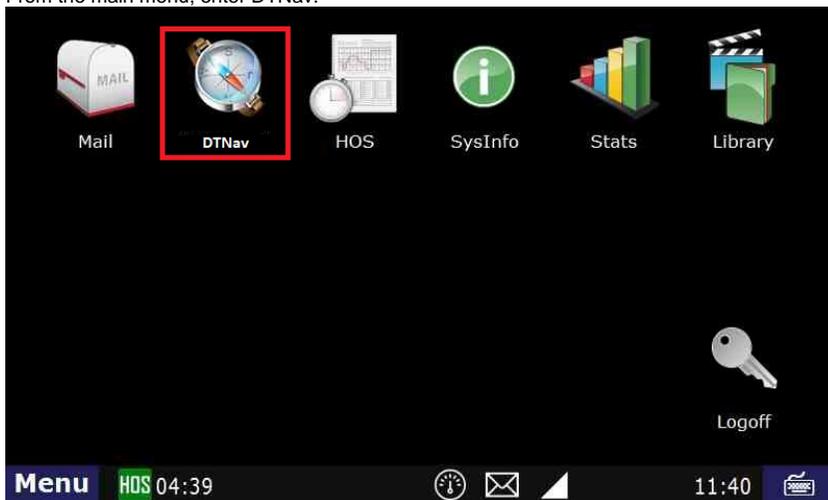

2. The main DTNav screen has a button for Settings:



3. After pressing on the Settings button, you'll want to press on Truck Settings:



4. Then Truck Warnings:

How-to Disable Speed Alerts in DTNav




5. Then Speed Limit Warning:



How-to Disable Speed Alerts in DTNav

6. You can then select the speed, relative to the posted speed limit, that the warning will trigger. Placing the slider all the way to the left will disable the warning:

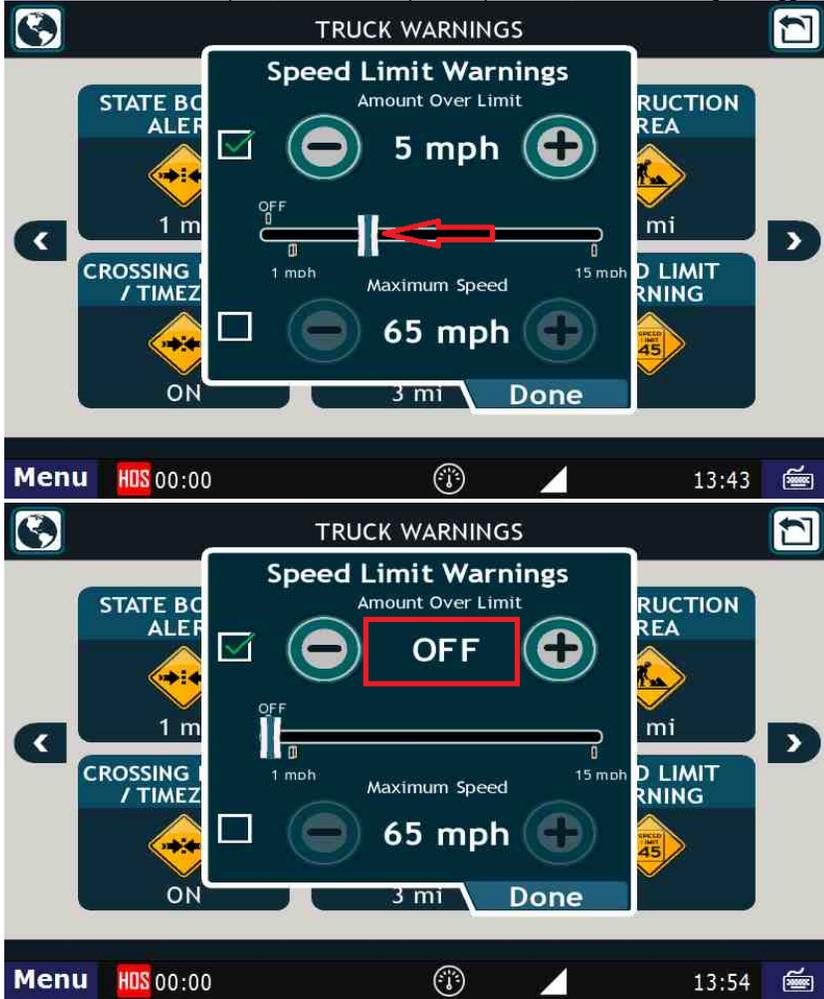

7. Touch the "Done" button when you're done



Related articles

- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)
- [How-to change the truck number on your device](#)
- [Helpful Pages for New Customers](#)
- [How-to Calibrate Your Screen](#)

[Back to The Top](#)

[Home](#)