


How-to Assign a Co-Driver

How-to Assign a Co-Driver


1st driver logs in, goes into Sleeper Berth. Or, Driver #1 logs in, goes on duty, then logs out.
The current driver always logs in 2nd. Driver #2 then goes into Driving status.

Step-by-step guide


1. The co-driver (the person who is not driving first) logs into the unit
2. The co-driver should enter their desired status (on-duty is most likely)
3. The co-driver logs out
4. The driver logs in
5. The driver goes on-duty
6. While going on-duty the driver selects the "Co-driver" field

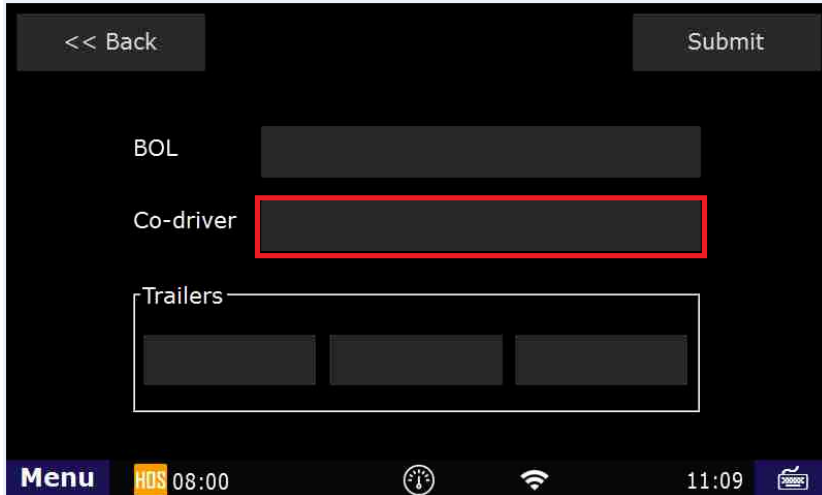

7. From the "Select Co-Driver" screen select your co-driver's name

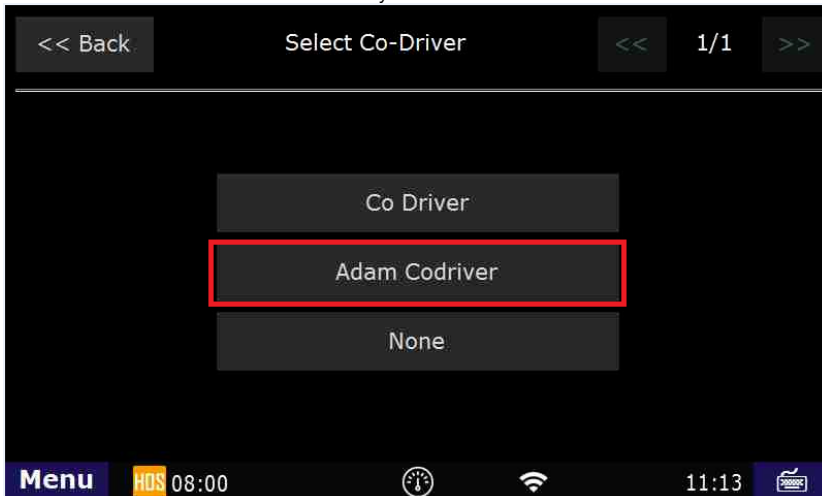


8. After selecting your Co-driver you screen will look similar to this:

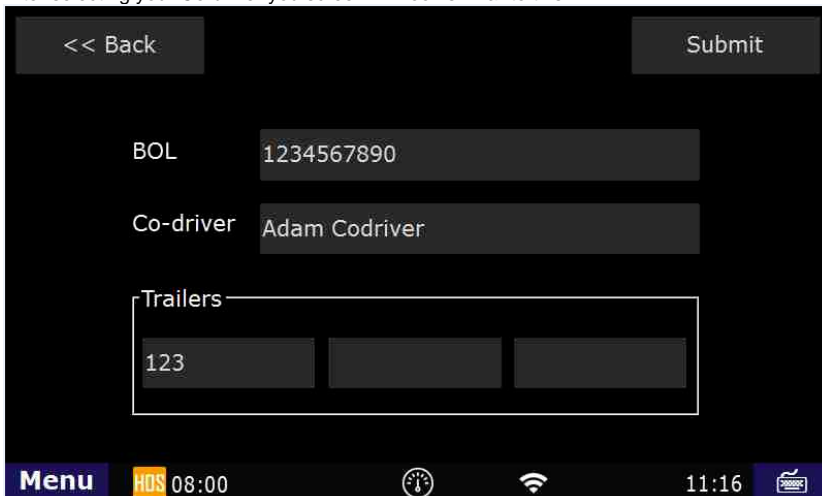

9. Now, as long as the information on this screen is correct, you can select "Submit"

How-to Assign a Co-Driver

10. Answer any additional prompts and then select "Submit" again
11. You now have a co-driver assigned, and can use the "Co-Driver" button on the US-8/Main HOS screen

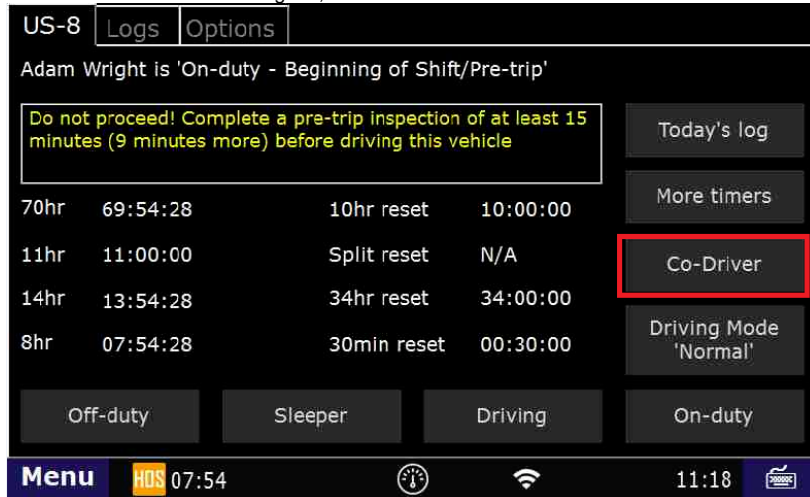

WARNING: BOTH DRIVERS MUST LOGIN TO THE UNIT WITHIN THE LAST 24 HOURS IN ORDER TO BE SELECTABLE AS THE CO-DRIVER

Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)