


How-to Send a Message from the ELD


How to send an email message from your unit.

Step-by-step guide


1. Touch the "Mail" (the mailbox) icon on your menu screen.

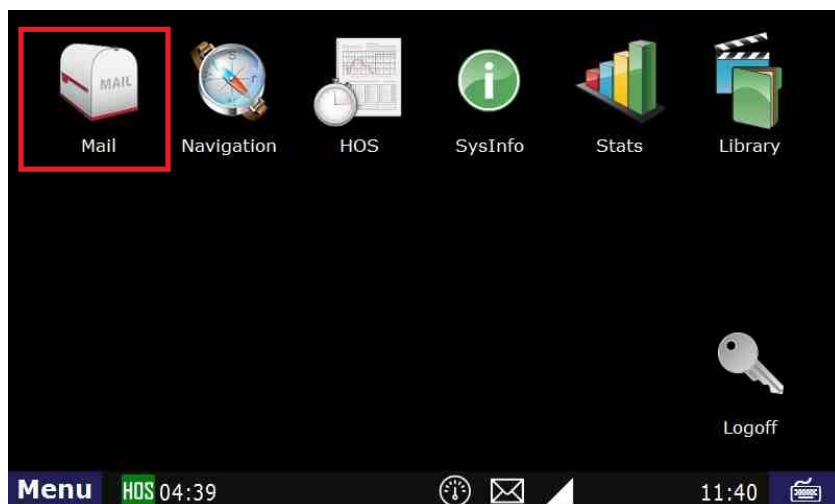

2. Touch the "Send" tab
 - a. The "Form" option will bring up a series of templates from which you can choose.
 - b. The "Free Form" option will bring up the window to enter the subject, message, to send to Dispatch
 - c. The "E-mail" option brings up a list of addresses to which you can send a message.

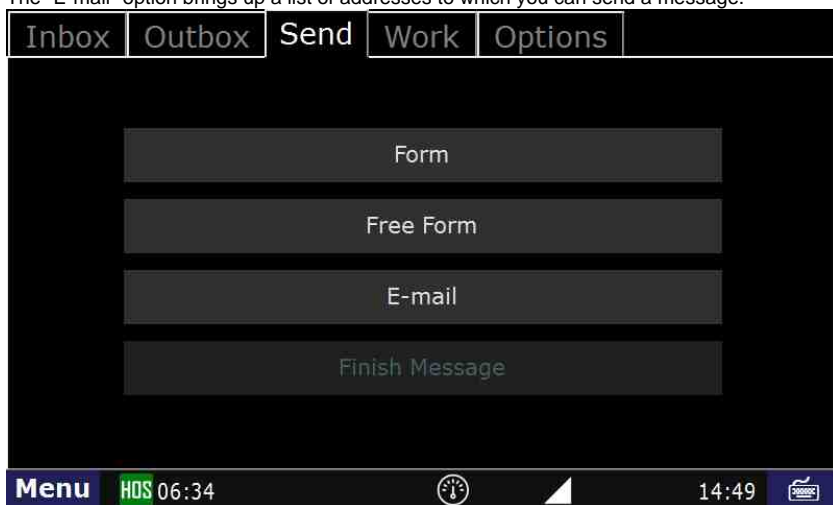


3. For this example, we're going to use the Free Form option. In the next screen, enter the subject, then touch Submit

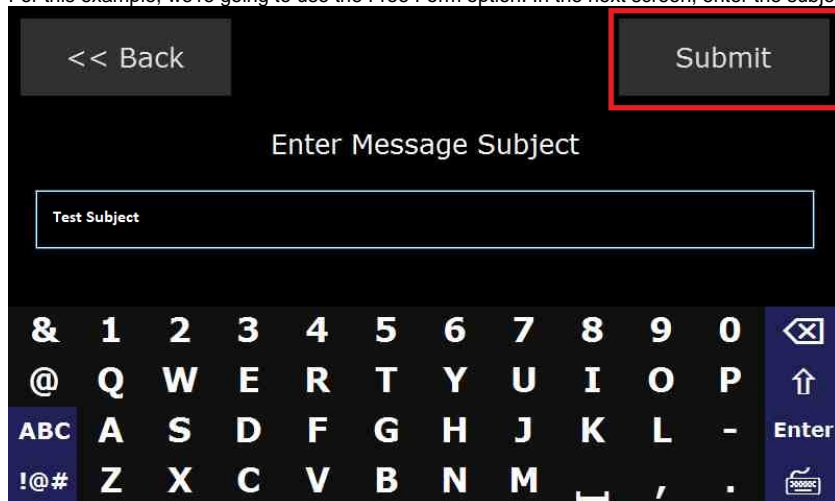

How-to Send a Message from the ELD

- Press in the message body field (below the subject line) and enter your message.

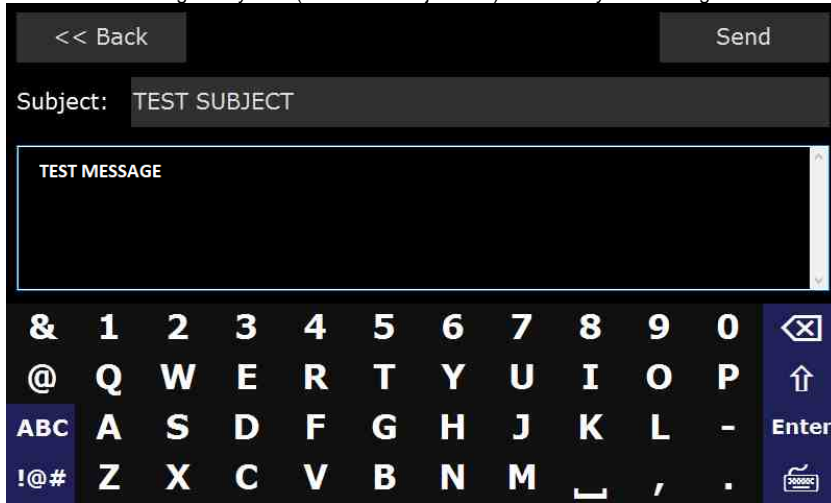The screenshot shows a mobile application interface for sending a message. At the top, there is a dark blue header bar with a '<< Back' button on the left and a 'Send' button on the right. Below the header, there is a 'Subject:' label followed by a text field containing 'TEST SUBJECT'. Underneath the subject field is a large, empty text area for the message body, with the text 'TEST MESSAGE' visible at the top. At the bottom of the screen is a numeric keypad with letters assigned to numbers (e.g., 1-9, 0, *, #). To the right of the keypad are three buttons: a backspace key (X), an arrow key (↑), and an 'Enter' key with a keyboard icon.

- Press the "Send" button. This sends a message to your dispatch center.

Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)