

How does the Truck PC go from Driving to On-Duty automatically?

Question: How does the Truck PC (ELD) go to Off-Duty automatically?

Answer:

- Once the truck's tires stop rolling, the ELD will detect that stop.
- After 5 minutes, the ELD will display a pop-up, "Are you still driving?"
- If you answer No, the ELD will set an On-Duty status time-stamp at the time the tires stopped rolling 5 minutes ago.
- If you answer Yes, the ELD will keep you on Driving status until you set a different status yourself.
- If you don't answer at all after 1 minute, the ELD will assume an On-Duty status starting at the time the tires stopped rolling.
- IMPORTANT: During that interim 5 minutes, if you manually change your status to Off-Duty, the ELD will revert back and set an Off-Duty status time-stamp at the time the tires stopped rolling.

Going from Driving to On-Duty automatically Related articles <ul style="list-style-type: none">◦ Why did my workflow go to my Inbox and not my Work tab?◦ Why can't I add a status when I stop driving?◦ Why am I being auto-removed from Yard Move?◦ Who can Certify an HOS log?◦ What triggers an event that is recorded by the camera?										

Drivertech's Technical Support Line: 866-331-8785