

FleetWatcher, How-to Find the Vehicle/Driver Info Page

How-to Find the Vehicle/Driver Info Page

Step-by-step guide


1. Login to FleetWatcher.




2. Click on "Reports"




3. Click on "Vehicle/Driver Info"

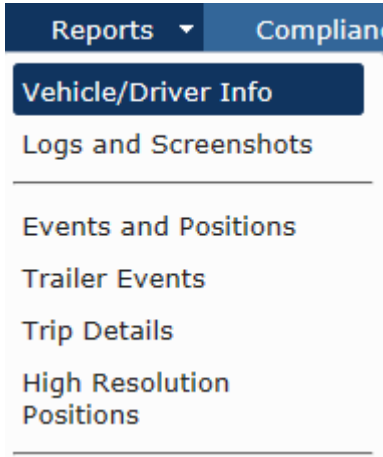


4. Click "Vehicle" to search by vehicle number, or "Driver" to search by Driver name or code.

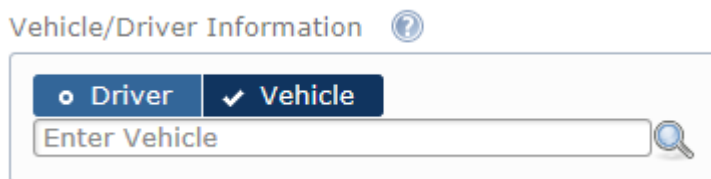

5. Type the vehicle number in the box located underneath the vehicle button and then click on the vehicle number.

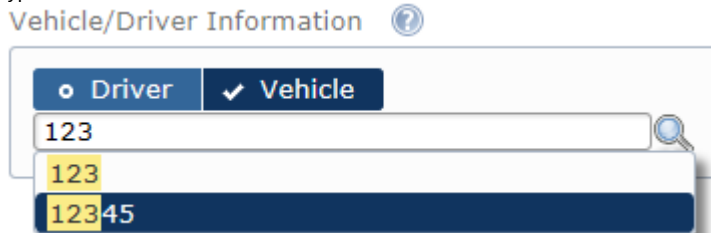

6. Click "Get Results" – Located on the right side of the page.

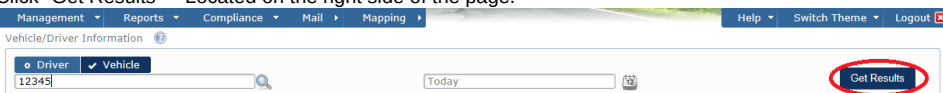

FleetWatcher, How-to Find the Vehicle/Driver Info Page

7. You are now on the Vehicle/Driver Info page.

The screenshot shows the FleetWatcher web interface. At the top, there's a navigation bar with links like Management, Reports, Compliance, Mail, Mapping, Help, Switch Theme, and Logout. Below this is a search bar with 'Driver' and 'Vehicle' tabs, and a search box containing '12345'. The main content area is divided into two columns. The left column, under the 'Vehicle' tab, displays details for vehicle 12345, including Name, VIN, Odometer, Location, Last GPS Time, Last Hq Time, Power Status, Logged On, Ignition, Last Status, Version, Transport, Serial Number, Terminal, Groups, and Tagged For. The right column, under the 'Driver' tab, displays details for the driver, including Name, Email, Logged On, Active, Last Login, Last File Sync, Updates, Settings Group, Terminal, and Time Zone. The interface also features a toolbar with various actions like Ring Vehicle, Send Message, Send Settings, Request HOS Logs, Request EODR, Log Driver, Send Log, Key BLD Log, Key Registration, Key W/O Inventory, Key B/W Inventory, Upload HOS Log, and Screen Capture.

Vehicle/Driver Information

Driver: 12345 Vehicle: 12345 Today Get Results

Ring Vehicle Send Message Send Settings Request HOS Logs Request EODR Log Driver Send Log Key BLD Log Key Registration Key W/O Inventory Key B/W Inventory Upload HOS Log Screen Capture

Information Statuses Messages Fault Codes Patch History Driver

Vehicle: 12345
Name: 12345
Truck/PCID: 320
VIN: N/A
Odometer: N/A (as of N/A)
Location: 2010 S Millstone Dr, Salt Lake City, UT 84104, United States
Last GPS Time: 7/7/2014 3:35:21 PM
Last Hq Time: 7/18/2014 10:31:47 AM
Power Status: Off
Logged On: No (Last Driver:)
Ignition: N/A
Last Status: N/A
Version: 5.31.02
Transport: W/O
Serial Number: 101408
Terminal: N/A
Groups: Default (Settings)
Default (Equipment)
Default (Patch)
Tagged For...: Settings
Queued Patch (s): None

Driver:
Name: N/A
Email: N/A
Logged On: N/A
Active: N/A
Last Login: N/A
Last File Sync: N/A
Updates: N/A
Settings Group: N/A
Terminal: N/A
Time Zone: N/A
Uses Daylight Savings: N/A

Related articles

- [How-to Add a Company and Terminal](#)
- [FleetWatcher, How-to Enter a Route in New DTNav](#)
- [Which Web Browsers for FleetWatcher Does DriverTech Support?](#)
- [What do the icons in the Log Overview report mean?](#)
- [FleetWatcher, How does it determine which speed reading will be reported?](#)

[Back to The Top](#)

[Home](#)