# **How-to Assign a Co-Driver**

### How-to Assign a Co-Driver

1st driver logs in and goes into Sleeper Berth. Or, Driver #1 logs in, goes on duty, then logs out. The current driver always logs in 2nd. Driver #2 then goes into Driving status.

Current driver always logs in last.

#### Step-by-step guide

- 1. The co-driver (the person who is not driving first) logs into the unit
- 2. The co-driver should enter their desired status (on-duty is most likely)
- 3. The co-driver logs out
- 4. The driver logs in
- 5. The driver goes on-duty
- 6. While going on-duty the driver selects the "Co-driver" field




7. From the "Select Co-Driver" screen select your co-driver's name



http://docs.DriverTech.com Copyright © 2017, DriverTech LLC Page 1 of 2

## How-to Assign a Co-Driver

8. After selecting your Co-driver you screen will look similar to this:

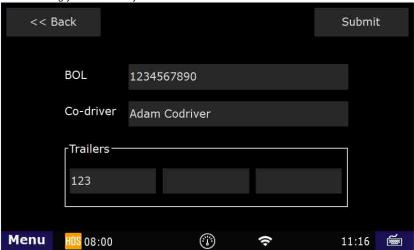

- 9. Now, as long as the information on this screen is correct, you can select "Submit"
- 10. Answer any additional prompts and then select "Submit" again
- 11. You now have a co-driver assigned, and can use the "Co-Driver" button on the US-8/Main HOS screen



WARNING: BOTH DRIVERS MUST LOGIN TO THE UNIT WITHIN THE LAST 24 HOURS IN ORDER TO BE SELECTABLE AS THE CO-DRIVER

#### Related articles

- How does the unit warn for Personal Use limits?
- · How-to send HOS ELD logs to Enforcement Officer for Roadside Audit
- Why do I see events from other trucks on my log for today?
- Who can Certify an HOS log?
- What is Required to Trigger an Auto-Arrival (Workflow)?

Back to The Top

Home