
# How-to Change a GPS Location From N/A

## How-to Change a GPS Location From N/A

#### Step-by-step guide


1. Select the date that requires a location update (indicated by a yellow star):

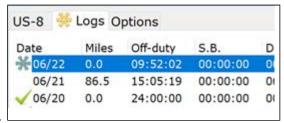

2. This will show the specific status that requires correction:



- 3. Select the status that you wish to change.
- 4. Now select the location field:

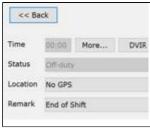

5. Enter the location:



6. Press "Submit" and your status will be updated.

#### Related articles

- How does the unit warn for Personal Use limits?
- How-to send HOS ELD logs to Enforcement Officer for Roadside Audit
- Why do I see events from other trucks on my log for today?
- Who can Certify an HOS log?
- What is Required to Trigger an Auto-Arrival (Workflow)?

### Back to The Top

Home