

About the ELD and Using It

FAQ

- [Can an ELD be set to 15 minute time intervals?](#) — Explanation of time intervals handled by the ELD
- [Can I change a Driving status to a Non-Driving status?](#) — Explanation of driving status
- [Does DriverTech's ELD have Anti-Virus software?](#) — Anti-virus handling by the ELD
- [DTNav, typing in a city name that starts with "South"](#) — Entering a City/State into DTNav
- [Health Check](#) — Performing a Health check from Sys Info
- [How are Speeding Alerts Created?](#) — How speeding alerts are created.
- [How can a driver combine their on-duty not driving status on an ELD, with Driving?](#) — Process for combining On-Duty with Driving status
- [How does the TruckPC detect driving?](#) — States how the TruckPC detects driving/movement from the truck
- [How does the Truck PC go from Driving to On-Duty automatically?](#) — Going from Driving to On-Duty automatically
- [How do I use the Agricultural Exemption](#) — Using the AG exemption
- [How do the HOS Timers calculate?](#) — A brief explanation of the timers/clocks in HOS
- [If I turn the TruckPC off and start driving, will it record my drive time?](#) — How the ELD auto-records drive time
- [I received a low memory warning. What should I do?](#) — What to do when receiving a low memory message on the unit
- [Manually Submit HOS Logs from the ELD](#) — ELD: Submitting HOS logs
- [Unit Icon Legend: What does this icon represent?](#) — What the various icons mean in the ELD
- [What can I do if my unit cannot send or receive messages?](#) — Troubleshooting messaging issues.
- [What does a driver need to do when they see diagnostic errors?](#) — FMCSA regulations on driver responsibilities when they see diagnostic errors.
- [What does the driver do on their end to register a DT unit?](#) — Registering the ELD on the driver's end
- [What do the icons in the Log Overview report mean?](#) — Fleetwatcher: Identifying the diagnostic icons
- [What is "Yaw Control via Engine" and "YC Brake Control"?](#) — An explanation of yaw control via engine and YC brake control.
- [What is automatically recorded by the ELD?](#) — Explanation of the data recorded by the ELD automatically
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#) — What triggers an auto-arrival in workflow?
- [What should I show a DOT officer while being inspected?](#) — Explanation of what to show a DOT officer when being inspected
- [What triggers an event that is recorded by the camera?](#) — Listing of the events that trigger a video from a camera
- [What were the 4 main HOS rule changes added in Sept. 2020?](#) — Related articles
- [When do my logs/current totals update?](#) — Explains when the logs and current totals update in FleetWatcher
- [When I press anywhere on the screen, only the bottom left corner lights up.](#) — When only the symbol key lights up when touching anywhere on the screen
- [Where Does State Mileage go if a Unit Was Unplugged While Crossing State Lines?](#) — An example explaining state mileage in regards to sensor jumps.
- [Which software version is my unit running?](#) — How to locate your unit's software version.
- [Who can Certify an HOS log?](#) — FMCSA regulation on the certification of HOS logs
- [Why am I being auto-removed from Yard Move?](#) — Brief explanation: how the driver is removed from Yard Move automatically
- [Why am I not able to use the Co-Driver feature?](#) — Information on the functionality of the Co-Driver feature
- [Why are my State Miles Showing on the Wrong Date?](#) — How to troubleshoot the State Mileage Report data
- [Why can't I add a status when I stop driving?](#) — Brief explanation: how to enter an on-duty status after driving has ended
- [Why is my unit shutting down while I'm driving?](#) — Lost power while driving?
- [Why was I put on the drive line before I started driving?](#) — An explanation of how the unit decides "driving" status.
- [Why wont my TruckPC turn on?](#) — Troubleshooting steps for a unit with no power.