

Why is my unit shutting down while I'm driving?

Q: Why is my unit shutting down while I'm driving?

A: Possibly this issue is linked to a cabling issue with the Power Cable

Some situations require a new power cable or changing the location from which we connect to Constant Power and Ground in the truck.

Drivertech's Technical Support Line: 866-331-8785

Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)

