

# Why am I being auto-removed from Yard Move?

**Q:** My DT unit removed me from Yard Move on its own. Why did this happen?

**A:** This depends on the System Settings for Yard Move that your company has set.

1. Example; the company has selected to allow Yard Move
2. Yard Move max mph has been set to 20
3. You are allowed to set your status to Driving - Yard Move
4. If you exceed 20 mph, the unit will detect this and set you to the regular Driving status.

DriverTech's Technical Support Line: 866-331-8785

Brief explanation: how the driver is removed from Yard Move automatically	Related articles													
<ul style="list-style-type: none"><li>• Why did my workflow go to my Inbox and not my Work tab?</li><li>• Why can't I add a status when I stop driving?</li><li>• Why am I being auto-removed from Yard Move?</li><li>• Who can Certify an HOS log?</li><li>• What triggers an event that is recorded by the camera?</li></ul>														