

Why was I put on the drive line before I started driving?

Q: Why was I put on the drive line before I started driving?

A: The TruckPC knows if the wheels are rolling or not. When it senses driving, it marks the time that the driving started internally in memory, but it doesn't display it until the driver drives the minimum required miles (configurable). Once it hits that minimum mile mark, the system puts the driver on the drive line at the time the wheels originally started moving. A 5 minute period of no motion is required to reset the driving started time

In almost all cases of this event, the unit had detected driving previously, but was not given a full 5 minute period of no motion to reset the driving started time

Drivertech's Technical Support Line: 866-331-8785

Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)

