

# Which software version is my unit running?

**Q:** Which software version is my unit running?

**A:**

1. Press on the "SysInfo" Info icon from the main menu.
2. Press on the "Diagnostics" tab.
3. Press the "Device Info" button.
4. Your software version will be listed on the right side of the screen as "DT Core"
  - a. In this example the software version is 6.09.06.06

<< Back	Customer	DriverTech
	Data #	4
	Registration #	
	Truck #	BRAD
	Serial #	195112
	VIN #	
	Driver name	Brad Support
	Settings	13:00 09/27
	Model	DT4R07
	DT Core	6.09.06.06
	Image	IMG_A_OSIRIS-003.31
	Firmware	8.1
	DTNav	1.04.00.00

Menu HOS 07:29 08:28

Drivertech's Technical Support Line: 866-331-8785

## Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)

[Back to The Top](#)

[Home](#)