

# How does the Truck PC go from Driving to On-Duty automatically?

## Question:

How does the Truck PC (ELD) go to Off-Duty automatically?

## Answer:

- Once the truck's tires stop rolling, the ELD will detect that stop.
- After 5 minutes, the ELD will display a pop-up, "Are you still driving?"
- If you answer No, the ELD will set an On-Duty status time-stamp at the time the tires stopped rolling 5 minutes ago.
- If you answer Yes, the ELD will keep you on Driving status until you set a different status yourself.
- If you don't answer at all after 1 minute, the ELD will assume an On-Duty status starting at the time the tires stopped rolling.
- IMPORTANT: During that interim 5 minutes, if you manually change your status to Off-Duty, the ELD will revert back and set an Off-Duty status time-stamp at the time the tires stopped rolling.

## Related articles

- [How does the unit warn for Personal Use limits?](#)
- [How-to send HOS ELD logs to Enforcement Officer for Roadside Audit](#)
- [Why do I see events from other trucks on my log for today?](#)
- [Who can Certify an HOS log?](#)
- [What is Required to Trigger an Auto-Arrival \(Workflow\)?](#)